

Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi

Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 Upute za rad
 Manual de operatii
 Treoracha Oibriúcháin
 Οδηγίες χρήσης
 El Kitabi
 Инструкции за експлоатация
 Инструкция по эксплуатации
 取扱説明書
 사용설명서
 使用说明书

U 5.165

2006/42/EG










DIN EN ISO 9001
 001929 QM
 DIN EN ISO 14001:2015

				<p>MAX. VACUUM</p>	
				<p>MAX.</p>	
<p>1</p>	<p>AIR</p>	<p>DIN EN ISO 3744</p>	<p>$L_{pA} = 70 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 72 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$</p>		<p>2</p>

			<p>104 kg 230 lbs</p>	<p>0 10 20 30 40 T [°C]</p>	<p>max. 90%</p>	<p>≤1000m >1000m</p>	
							<p>> 0°C/32°F < 40°C/104°F</p> <p>A > 100mm A > 4"</p>
<p>3</p>				<p>4</p>			

28100054300 02/19

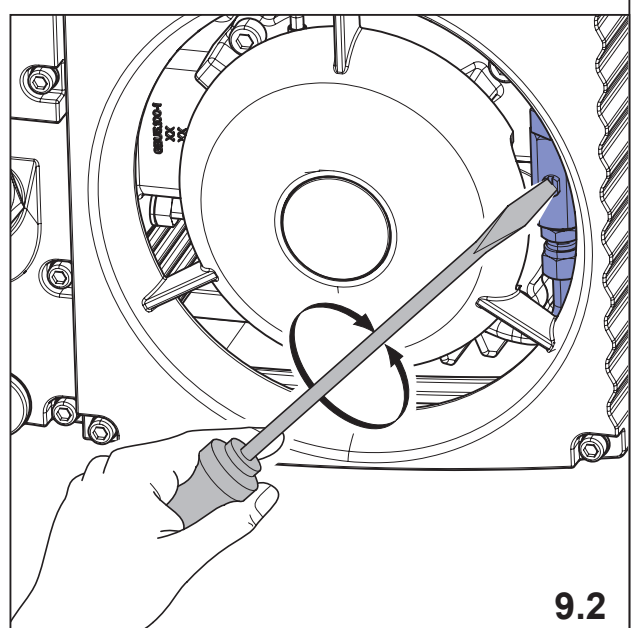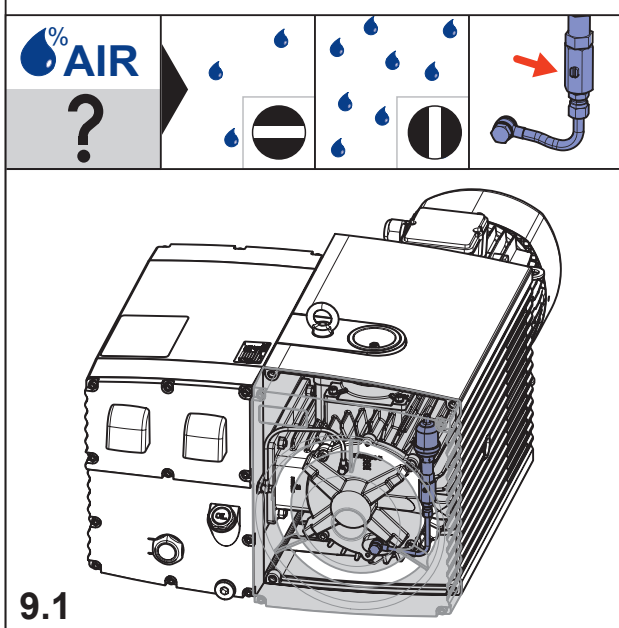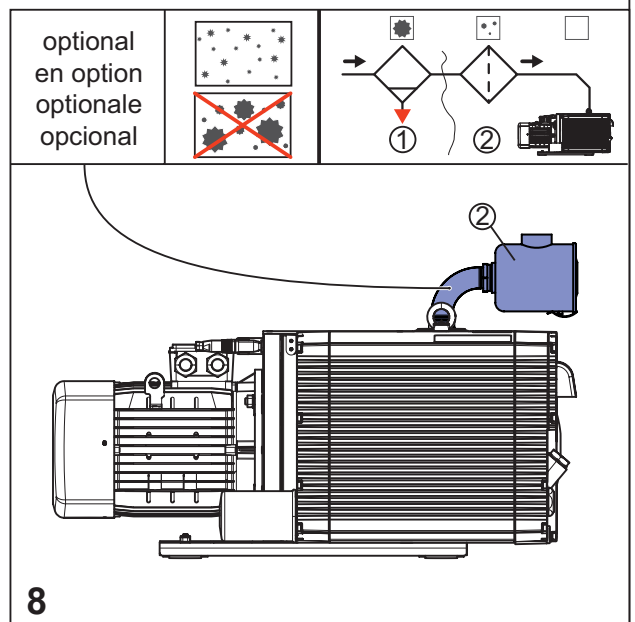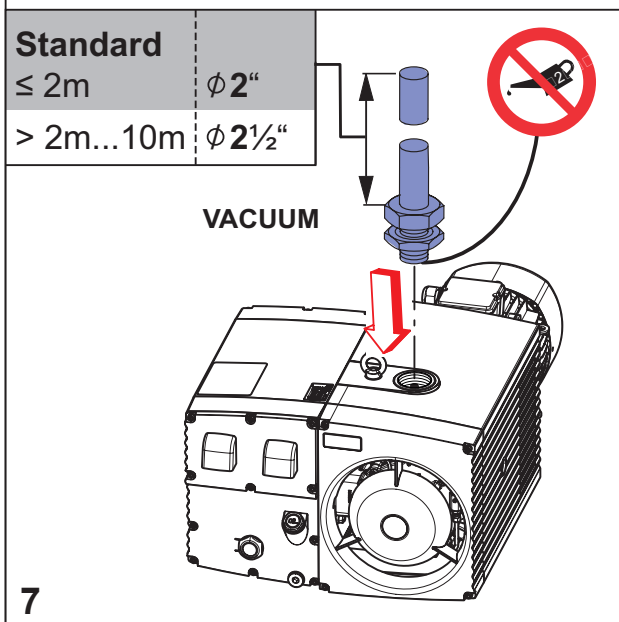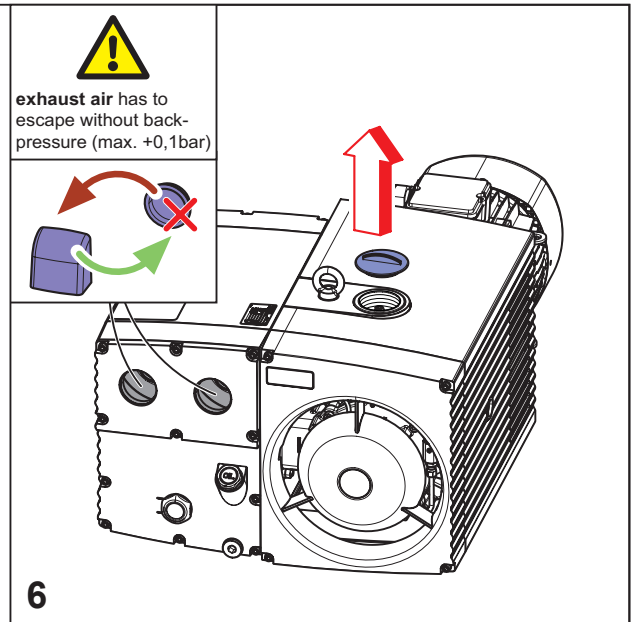
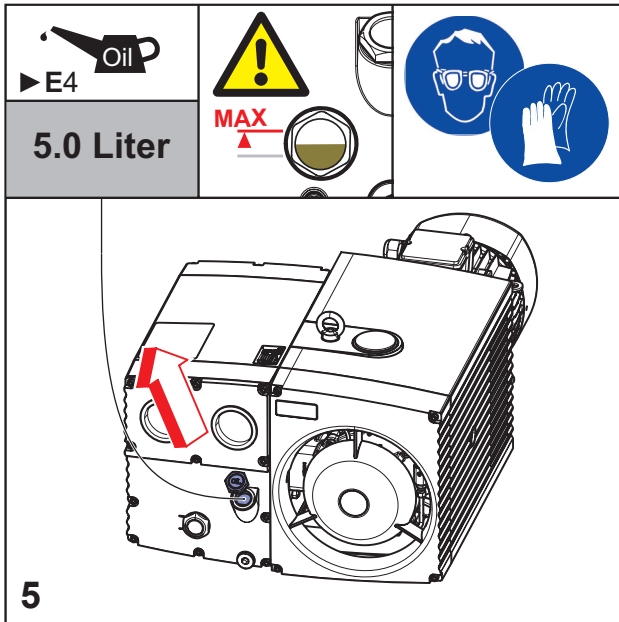


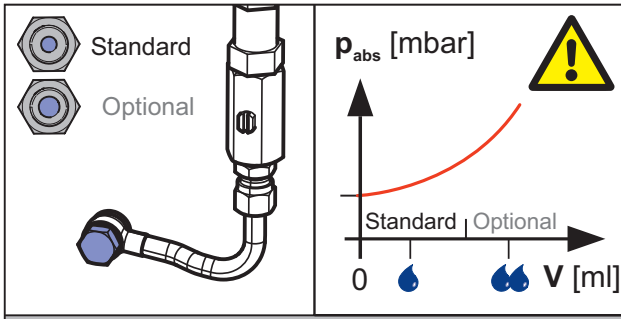


Standard 0.1/0.5 mbar [abs]
No.:54840054200

Optional 0.1/3.0 mbar [abs]
No.:54840154200

 
9.3

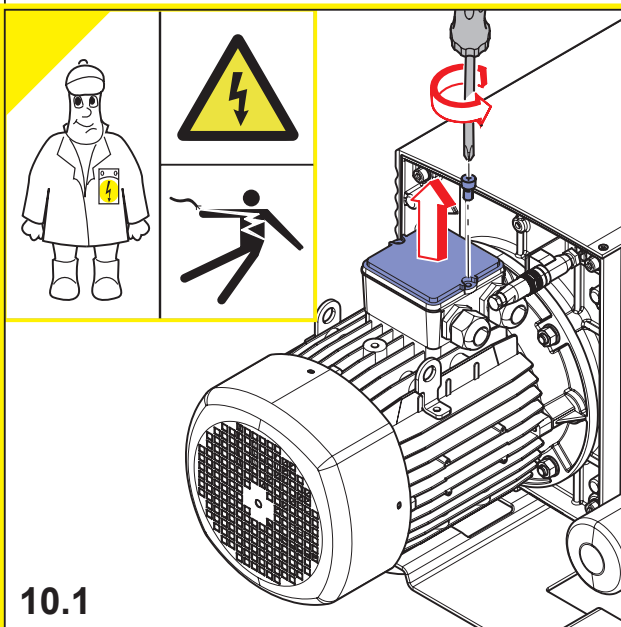


10.1

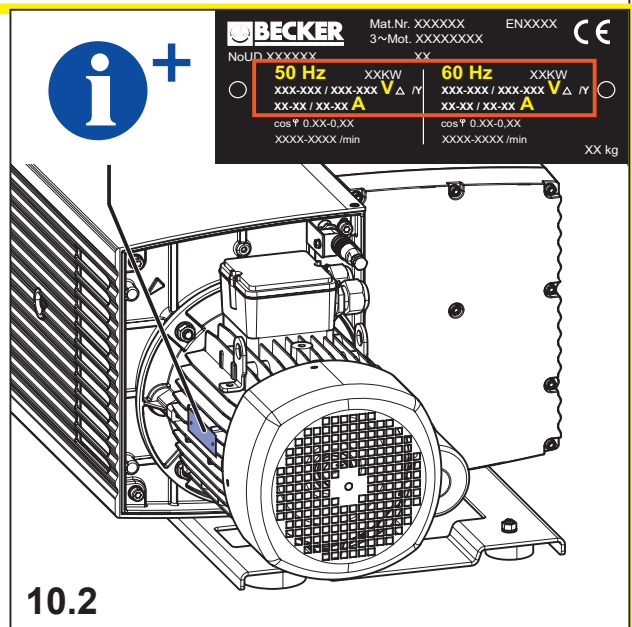









10.2

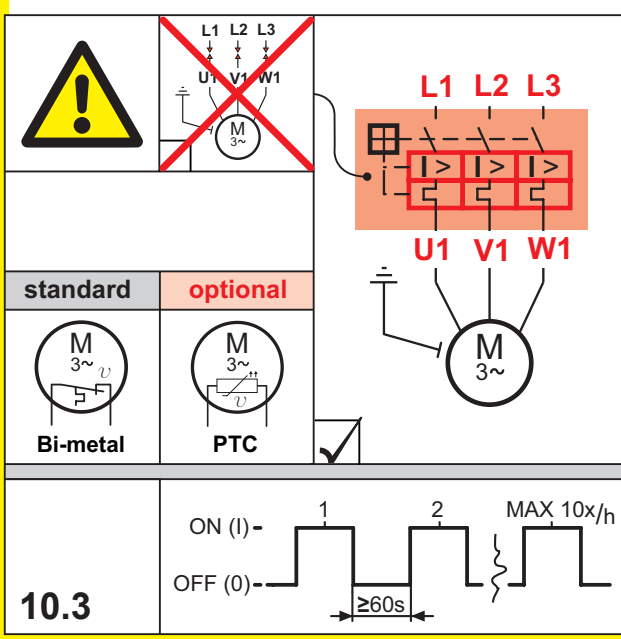

10.3

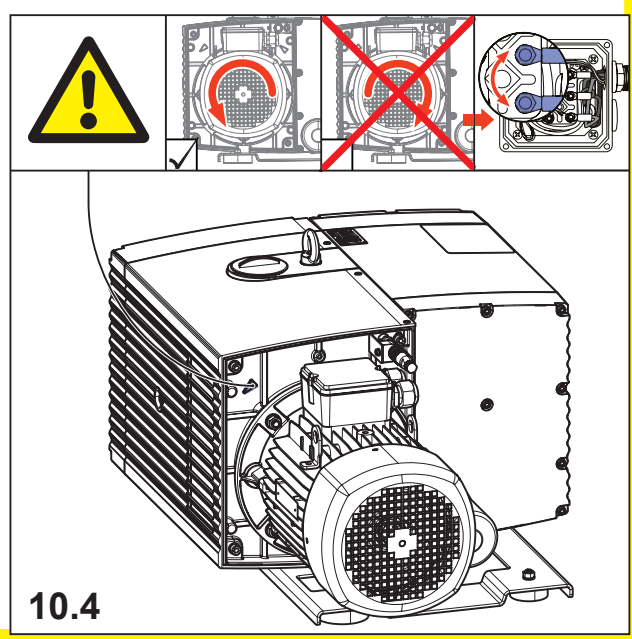

10.4

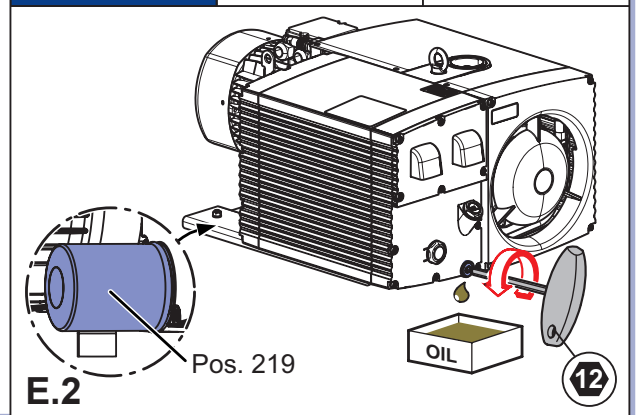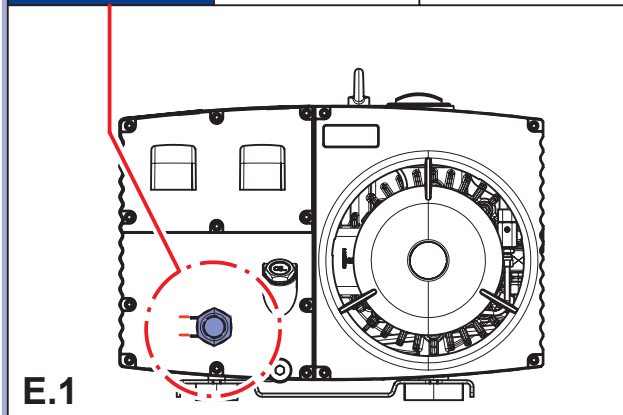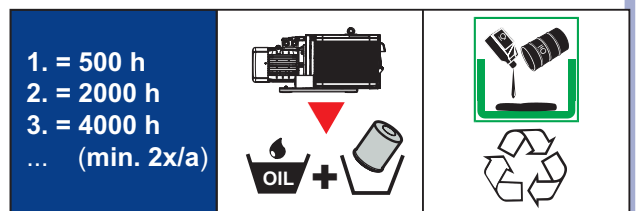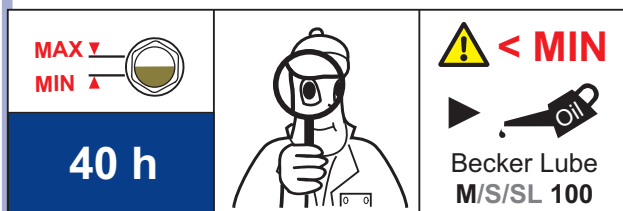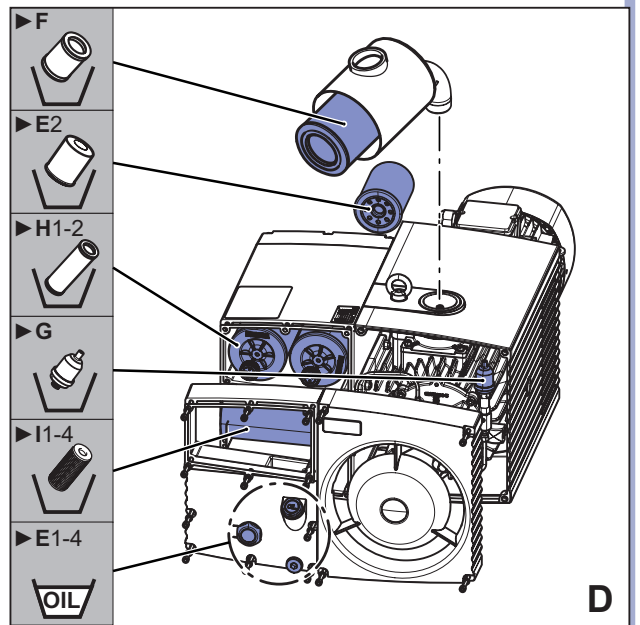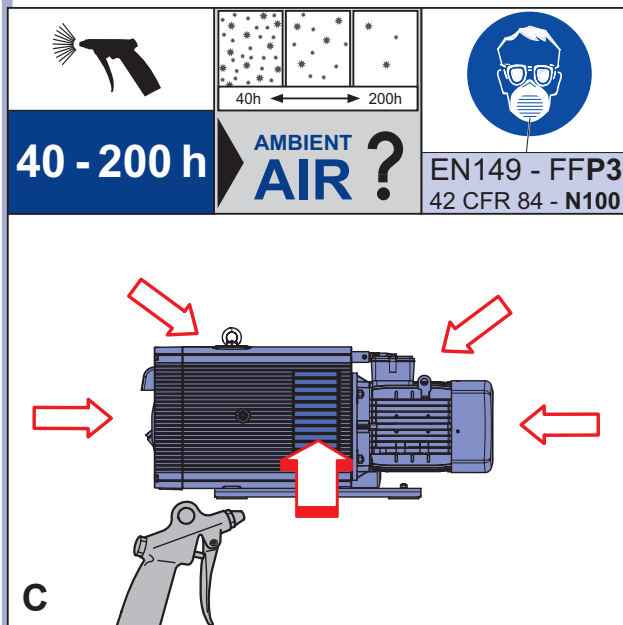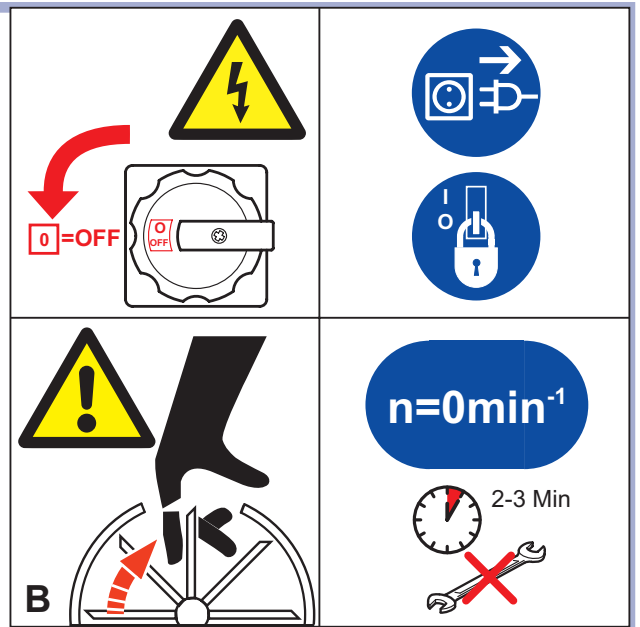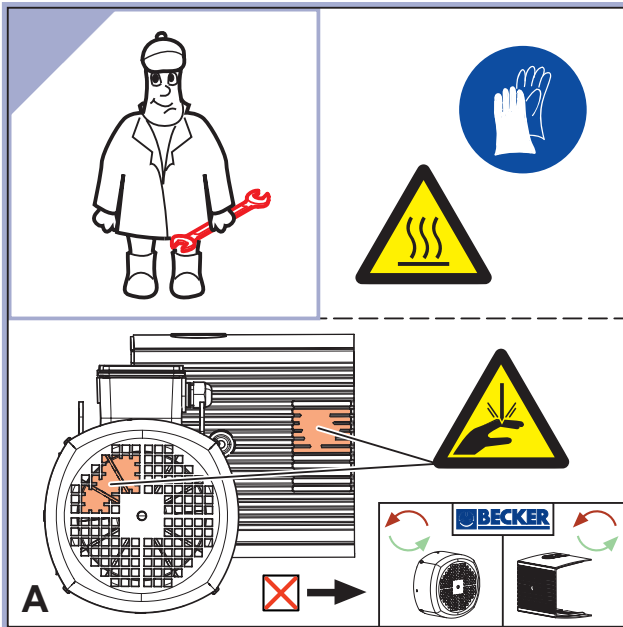

E4 **Oil**

5.0 Liter

MAX

E.3

Oil

S 100
M 100
SL 100

0 10 20 30 40 T [°C]

Becker Lube M 100
(Mineral oil)

- 1 Liter	96000900000
- 5 Liter	96000900200

Becker Lube S 100
(Synthetic oil)

- 1 Liter	96001600100
- 5 Liter	96001600200

Becker Lube SL 100
(Food)

- 1 Liter	96002300100
- 5 Liter	96002300200

E.4

MIN 1x/a

40h → 200h

40 - 200 h **INTAKE AIR ?**

F

MIN 1x/a

Pos. 455

G

MAX 2000 h **INTAKE AIR ?** **VACUUM**

0-400 mbar abs. ~~400 mbar abs. not permitted~~

500h → 2000h

11x **11Nm**

H.1

T [°C]

T_{fl}

T_{MAX}

MAX 2000 t [h]





Pos. 269

1.

2.

Pos. 235

H.2

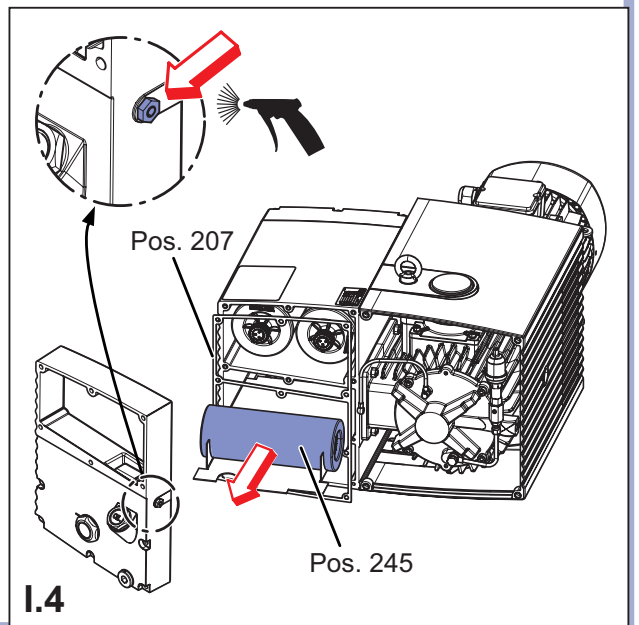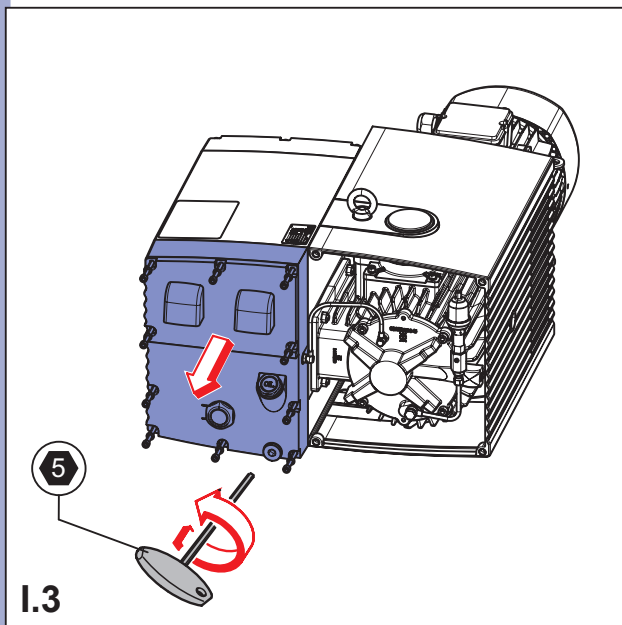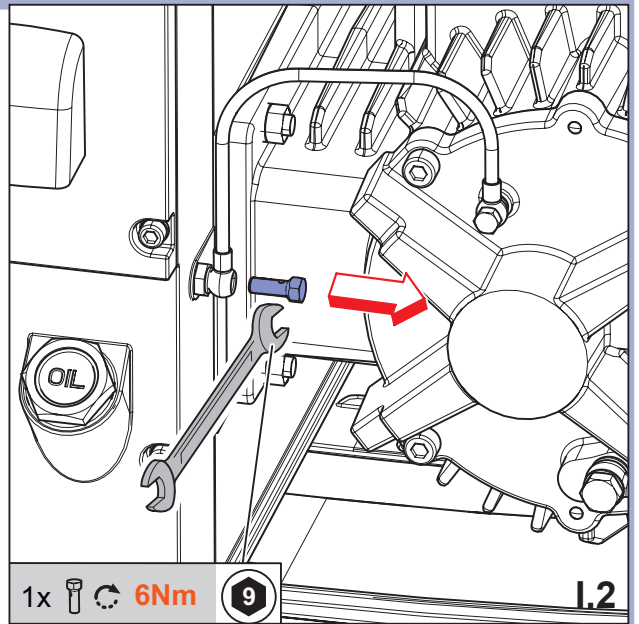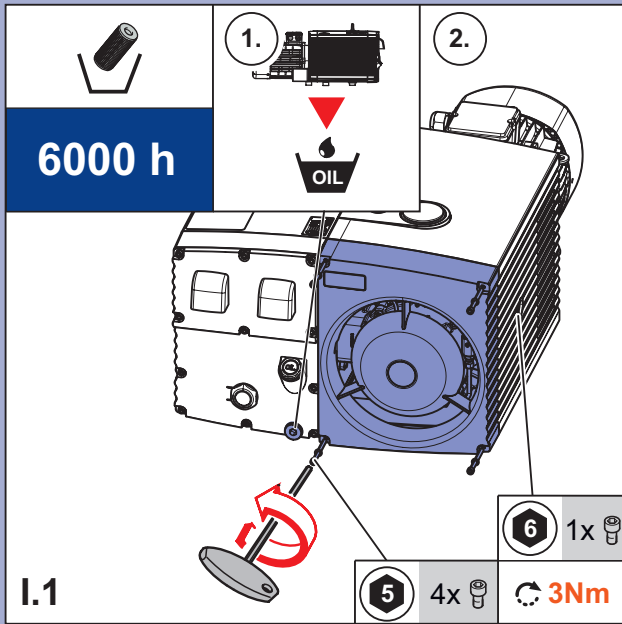

BECKER

Gebr. Becker GmbH
 Hölker Feld 29-31
 D-42279 Wuppertal
 info@becker-international.com

SERVICE

www.becker-international.com

Sales and service network