
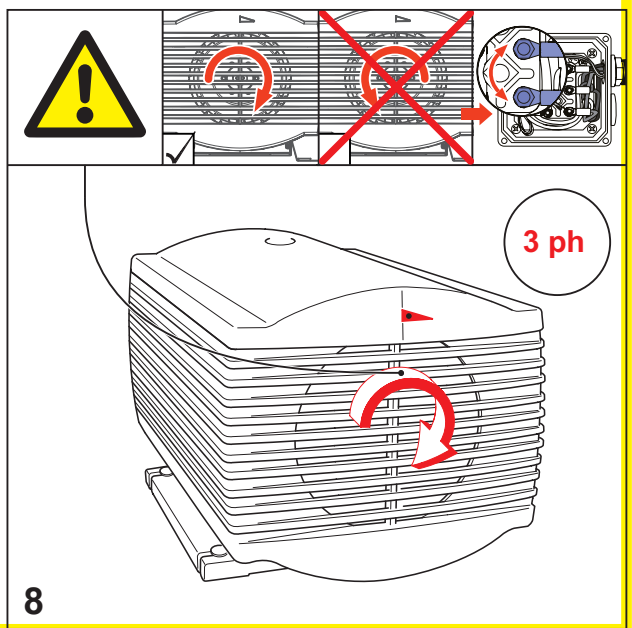
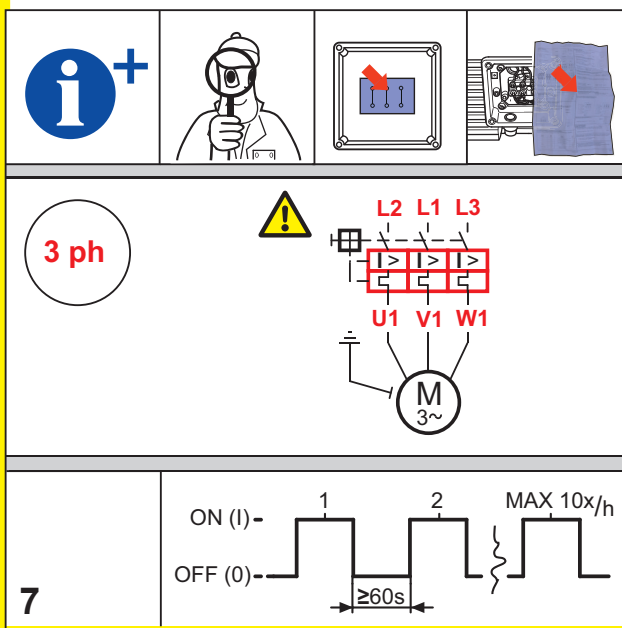
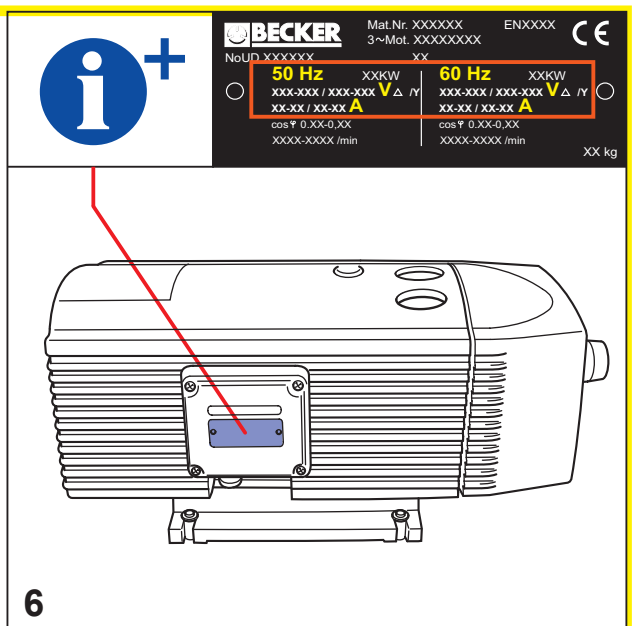
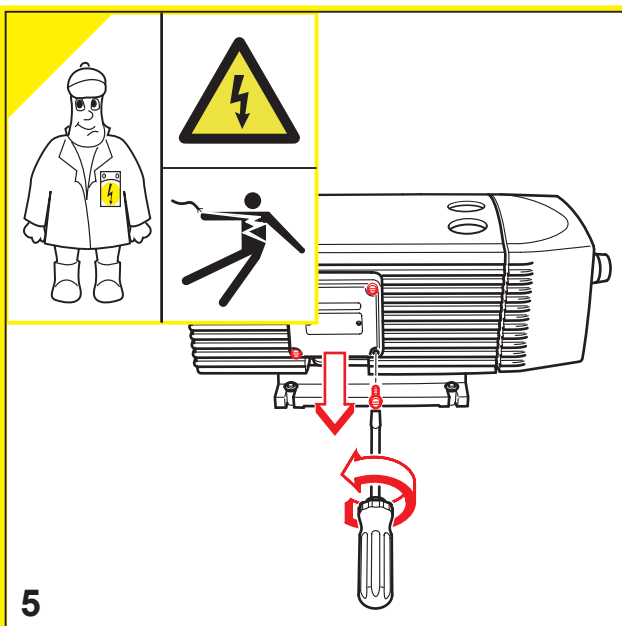
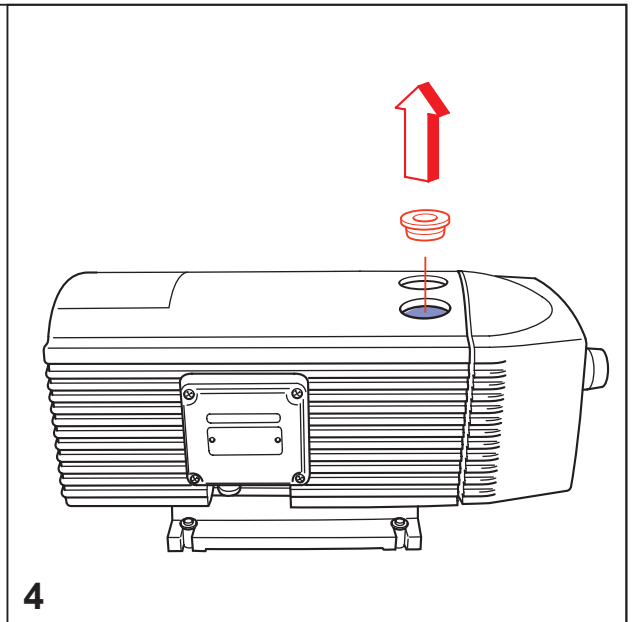








Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi

Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 Upute za rad
 Manual de operatii
 Treoracha Oibriúcháin
 Οδηγίες χρήσης
 El Kitabi
 Инструкции за експлоатация
 Инструкция по эксплуатации
 取扱説明書
 사용설명서
 使用说明书

				mbar
			$L_{pA} = 60 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 62 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$	

	$A > 100\text{mm}$ $A > 4"$	 $> 5^\circ\text{C}/41^\circ\text{F}$ $< 45^\circ\text{C}/113^\circ\text{F}$	 max. 90%	 max. 800m
1 16 kg 35,3 lbs	2 			

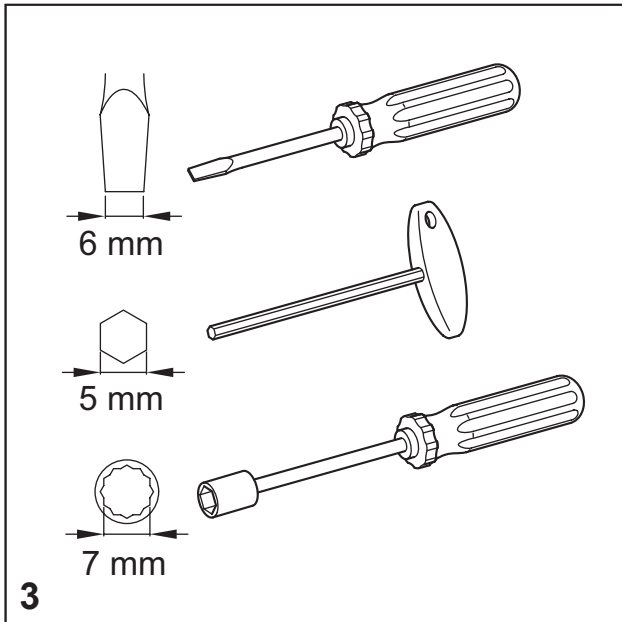

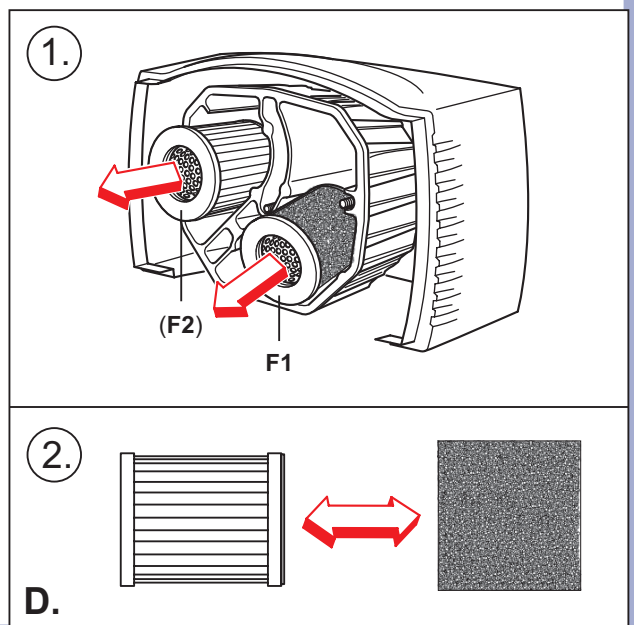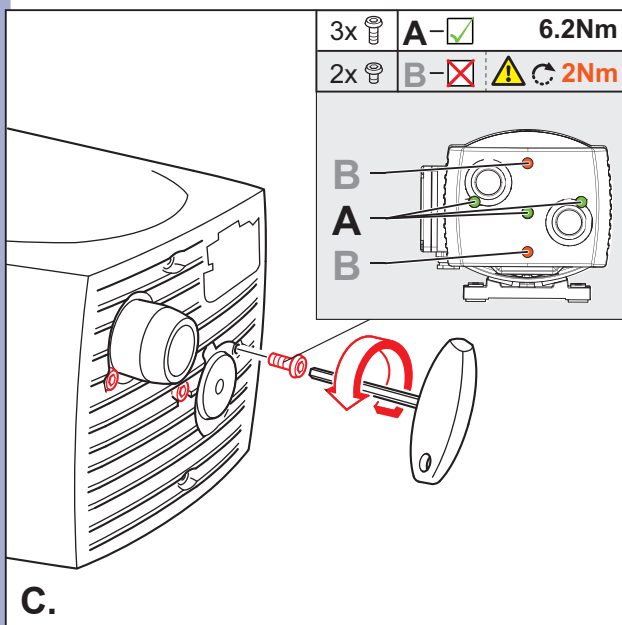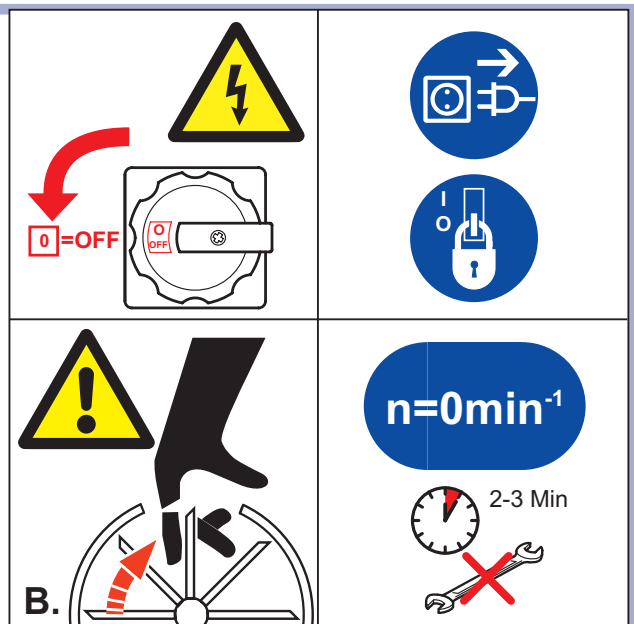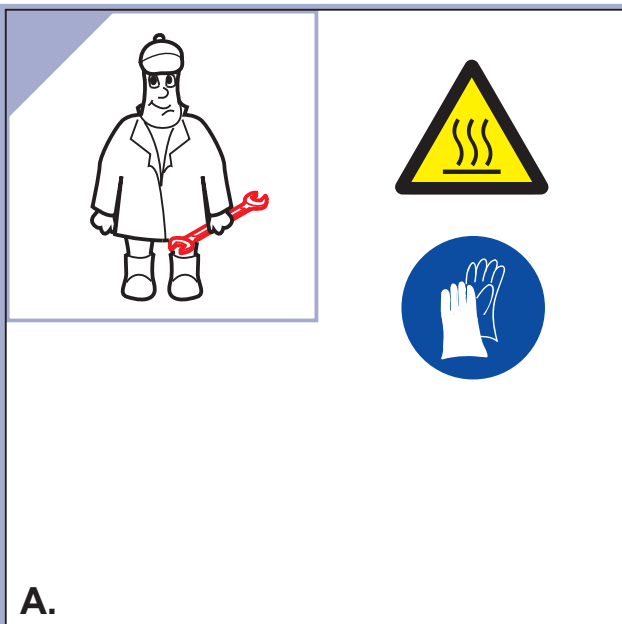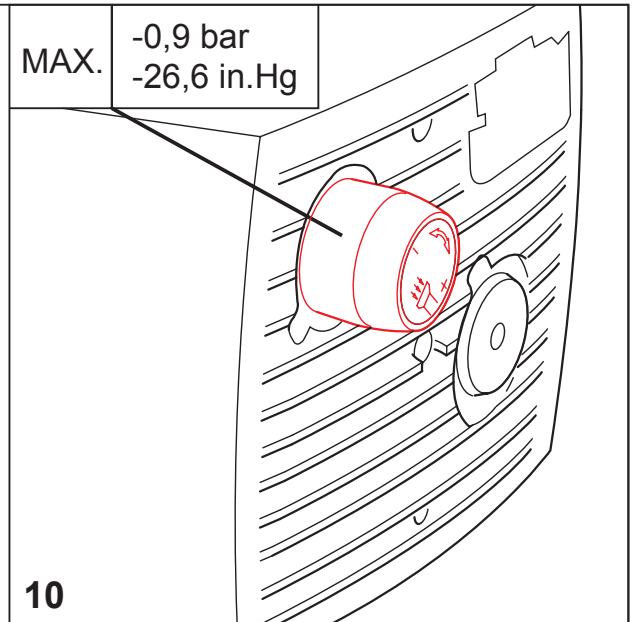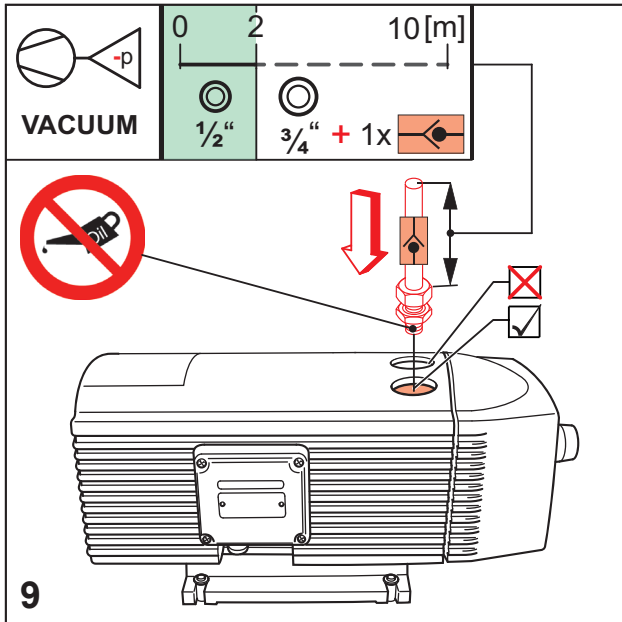

F1: D: 38 mm
H: 38 mm
No.: 90951801000

F2: D: 39 mm
H: 40 mm
No.: 90955400000

E.

F.

7500 h

$A_{MAX} = 26mm$
 $A_{MIN} = 18mm$

$A_{\text{err}} < 18mm$ →

G.

No. 90139800007 (SET)

H.

www.becker-international.com

Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal
info@becker-international.com

SERVICE
www.becker-international.com
Sales and service network